

# **Cooling Stage Operation procedure**

## **1. Cooling stage installation**

Click on temperature page , on temperature stage module. Temperature and humidity can be set and monitored on the temperature tab.

- 5 Once the stage has been drained and both water lines have been removed, blot out any remaining water from the connectors using a cotton swab or paper towel.
6. Install water line plugs into water fittings on the inside of the Chamber feed-through plate.
7. Pumping the chamber to Low Vacuum / ESEM mode first, then to high vacuum